

Button Commands

Sinden in BigBox from Main Menu

Dpad Up = moving platforms/games up

Dpad Down = moving platforms/games down

Front Right Button = selects platform/games

Rear Left Button = back button (to go back to menu options hold button for 5 to 7 secs)

.....

In-game Controls

To exit game: point off screen press rear left button

To insert coins: off screen front Right

button

To start game: on screen front Right button

For games that use a 3rd button: front left button

For Star Wars on Sega Model 3, the "Event Button": Pump action or offscreen trigger

.....

Non-Sinden

Use keyboard for menu controls

1=p1 start

5=p1 coin

2=p2 start

6=p2 start

Esc:exit games

3rd button : middle mouse button

Reload: right-mouse

Map these to your gun however you want.

